Numate

TT 1840G HT 1840

SCRUBBER DRYER







Original Instructions

CAUTION, Read instructions before using the machine



Machine Overview



1	Operator control panel	12	Vacuum hose
2	On / Off Lever	13	Separator
3	Waste water tank	14	Clean-water filler cap
4	Clean water tank	15	Clean-water level indicator
5	Brush deck	16	Clean-water tank fill point
6	Squeegee blades	17	Top tank (waste water) drainage hose
7	Floor-tool retaining knobs	18	On / Off Switch
8	Clean-water on / off tap	19	Vacuum Switch
9	Clean-water emptying cap	20	Pump Switch
10	Rear moving wheels	21	Power Light
11	Floor-tool vacuum hose	22	Handle Position lever

Quick Set-Up Guide



Please read before commencing any operation. After the removal of all the packaging, carefully open and check the contents.






Using the handle position lever, move the handle into the upright position. (Fig 1).




Tip the machine. (see Page 4)





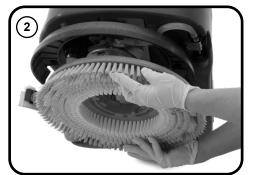

Fit the Brush / Pad (Fig 2).

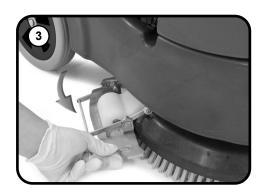

Swing the floor tool carrier from behind the brush. (Fig 3).



Use the two locking knobs fitted to the floor tool, secure to the floor tool to the floor tool carrier. (Fig 4).




Fill using a hose, bucket or a suitable container. (Fig 5).


Fill the clean-water tank to a Max of 18 litres (see page 5)

For operation and cleaning controls (see page 9)

Tipping the Machine

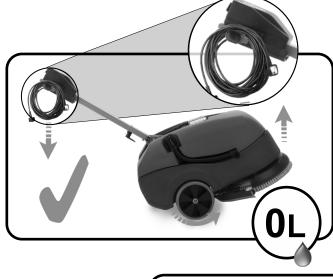



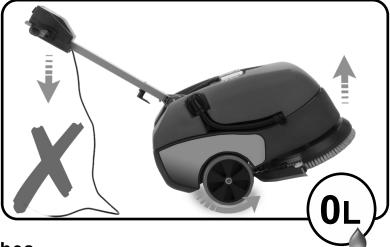

Fitting the brushes

Featuring the Nulock brush system.

The brush is fitted simply by pushing and twisting to lock in place, making fitting and removal a simple process.

Only use manufacturer supplied brushes. This machine requires a 400mm brush or a 360mm pad.



Slide the brush / pad under the brush deck (Fig 6).



Fit the brush / pad onto the Nulock drive chuck, twist to lock the brush / pad in place (Fig 7).

Fitting the Floor Tool

The floor tool has been designed for quick fitting, allowing easy squeegee blade replacement and a safety knock-off feature if the floor tool gets snagged, whilst in transit.

Note: The lever moves upward and backward motion to lock the floortool in the raised position.



The floor tool carrier can be raised and locked from moving by operating the locking lever, upwards and backwards.

This lever can be found next to the lower section of the handle. Unlock and swing the floor tool carrier to the side of the machine (Fig 8).




Note: It is easier to fit the floor-tool if the weight of the machine is resting on the brush. Ensure the brush is fitted first.




Secure to the carrier using the two knobs fitted to the floor tool carrier (Fig 9) - (Fig 9a).

Do not over tighten the retaining knobs.

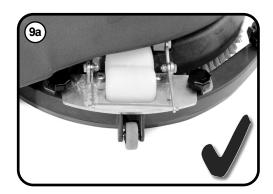

Filling the clean-water tank

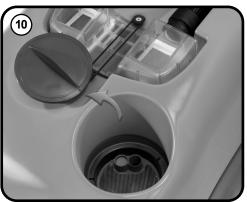

The HT1840 & TT1840 are equipped with a large 18 litre clean water tank allowing large areas to be cleaning in a single fill.

To fill the clean water tank, remove the filler cap (Fig 10).


Fill using a hose, bucket or a suitable container. (Fig 11).




Note: Great care must be taken to ensure that contaminants (leaves,hair, dirt, etc) are not allowed to enter the clean-water tank during the filling process. If using a bucket or similar, ensure it is always clean and free from debris.

Fill Level Indicator


Fill the clean water tank to a maximum of 18 litres, including cleaning chemicals if required. Follow chemical manufacturing guide lines.

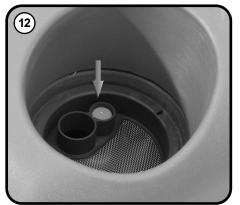

Use the fill indicator (Fig 12).

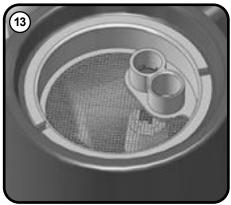

Showing the clean water tank empty (Fig 13).

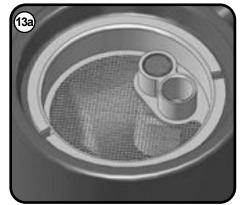

Showing the clean water tank full (Fig 13a).


WHEN HANDLING AND MIXING CHEMICALS
Always ensure that chemical manufacturer's safety guidelines are followed.
Only use chemicals recommended for use in auto scrubber-dryers.

Control of Substances Hazardous to Health (COSHH)

For best results use a non-foaming type of chemical, dilute to the manufacturer's specification. For further guidance on hazardous substances refer to health and safety instructions online. Visit http://www.hse.gov.uk/ for UK information.



Water Flow Adjustment

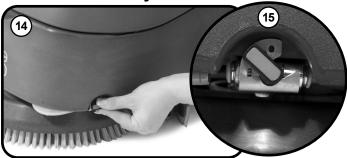

Located on the left of the machine is the On / Off water tap (Fig 14 / 15).

Pre-cleaning advice.

Before performing the cleaning operation, place out appropriate warning signs and sweep or dust-mop the floor (Fig 16).

Numatic part (629044) Wet Floor sign (available if required)



Important

Do not operate machine unless the Operator Manual has been read and fully understood.



 ${\it CAUTION} \\ When moving or lifting the {\it HT~1840/TT~1840}, follow the national safety guidelines on lifting. }$



Moving the machine



Transport the machine by tilting back on to the main transit wheels (Fig 17).



When the top tank (waste water) is full the machine can be tilted to a maximum of 10° for transporting to dumping area (Fig 18).



When the bottom tank (clean water) is full the machine can be tilted to a maximum of $45^{\rm 0}$ (Fig 19).



Weight of empty machine 38.5Kg (85 lbs) (Fig 20).







Machine Operation


Pre-scrub mode

The HT1840 & TT1840 have been designed to cope with a variety of floor types and different levels of soiling. On heavily soiled floors use a 'double scrub' technique.

First pre-scrub the floor with the floor tool in the raised position (Fig 21), allow the chemical time to work, then scrub the area a second time with the floor tool lowered.

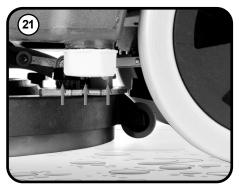

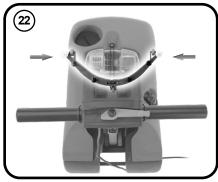


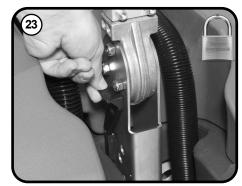

To raise the floor-tool, ensure the floor tool carrier is central to the machine (Fig 22). Lift the lever near the base of the handle and lock into position (Fig 23).

Note: The lever moves upward and backward motion to lock the floor tool in the raised position.

Floor tool in use

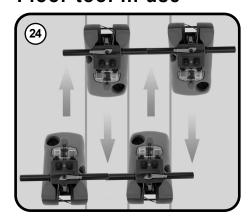

The clean-water / chemical mix is dispersed via 'THRU-FEED' system. The waste water is then retrieved by the floor tool

Overlap the scrubbing path by 10cm to ensure an even clean (Fig 24).

If streaking occurs, wipe the floor tool blades clean (Fig 25).



Note: Care must be taken to reduce speed when cornering or when manoeuvring around obstacles.










Setting the cleaning controls


Ensure your HT1840 / TT1840 machine has been plugged into a suitable power supply. Select the desired function using the ON / OFF switches fitted to the handle.

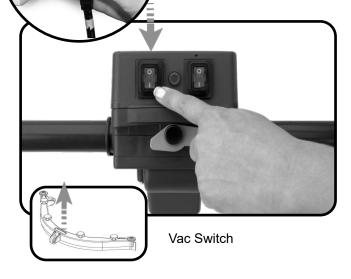


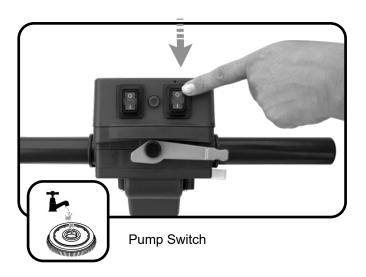

Note: The Pump Switch will only function when the Brush is in operation.

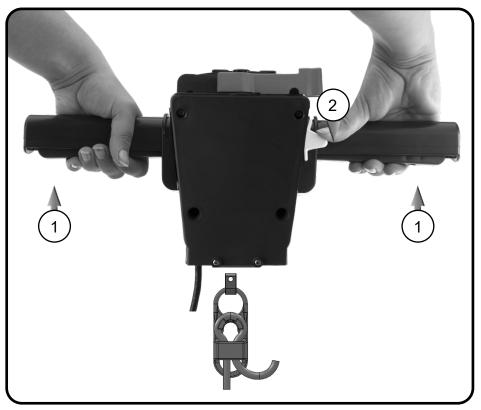



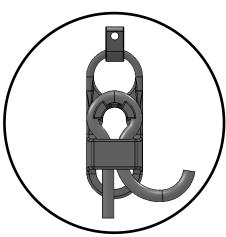

Regular Maintenance



ALWAYS ENSURE THAT THE POWER SUPPLY IS DISCONNECTED, PRIOR TO ANY MAINTENANCE OPERATION.




The HT1840 & TT1840 have been designed with ease of use in mind, this included easy stripping down and cleaning.






After use, empty waste water tank using emptying hose and flush out with clean water. (A)

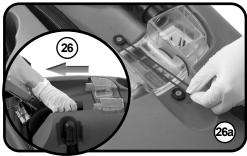

Remove the two hoses and disconnect the separator from the machine (Fig 26). Undo the separator restraining strap (Fig 26a) and lift off the separator. The separator has a sealing rubber which should be examined at every clean down (Fig 27). Rinse using clean water.

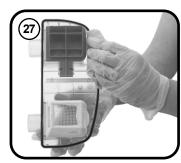










Remove the two filters clipped into the separator and flush with clean water (Fig 28)(Fig 29). Replace by fitting the rear of the filter first then clipping the front to lock in place (Fig 30) (Fig 31).



Once emptied the top waste water tank can simply be lifted off. (Fig 32).

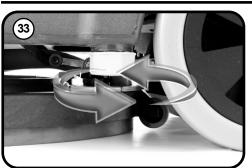

The clean water tank can be drained via the yellow cap fitted to the left hand side of the machine. The cap has a rubber seal and might require a spanner to remove. (Fig 33).

Note:

Avoid over tightening the clean water draining cap.

Regular Maintenance

Clean Water Filter

Inside the clean water tank is a filter, located below the clean water inlet. Remove the cap and large debris basket.







*NOTE: Clean water tank side cut away for clarity.

Make sure this filter is kept clean from debris and chemical contamination.

Replacing the Waste Water Tank







Refit the separator and reconnect the vacuum and suction hose (Fig 36).

Refit the separator restraining strap (Fig 37).



Notes:

Changing the Floor-Tool Blades



ALWAYS ENSURE THAT THE POWER SUPPLY IS DISCONNECTED PRIOR TO ANY MAINTENANCE.








To change the floor tool, firstly swing the floor tool clear of the machine (Fig 38).



Undo the two floor tool retaining knobs (Fig 39).

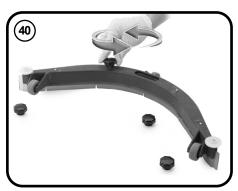

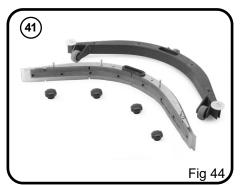

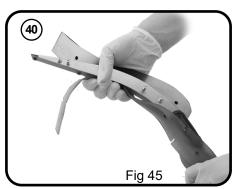

Unscrew the four knobs securing the blade holder (Fig 40).

Remove the blade holder (Fig 41).

Replace the Squeegee blades using (606261) replacement blade set (Fig 42), fitting the blades on to the moulded location lugs.

Refitting the Floor Tool Blades





Refit the blade holder, retain using the two outer knobs (Fig 46)

Ensure the slotted blade goes to the front of the floor tool (Fig 47).

Note:


The blades are designed to be reversible, thus extending their useful working life.

Refit the floor tool using the two central knobs to the floor tool.

Refer to Page 5 for fitting instructions.

- 1. Floor tool main body
- 2. Blade carrier
- 3. Rear blade
- 4. Front blade (slotted)
- 5. Retaining Knobs x 4


Use Genuine NUMATIC spare parts. use Replacement Blade Set (606261)

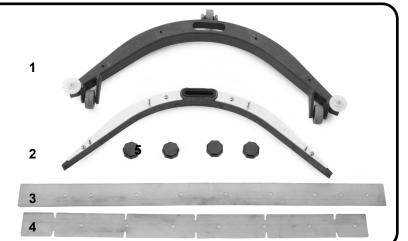

About the Machine

Rating Label

- ① Company Name & Address
- 2 Machine Description
- 3 Voltage Frequency
- 4 Power rating
- 6 Max Gradient
- **6** Weight (ready to use)
- Approvals Mark
- **8** WEEE Logo
- Splash Proof Rating
- Machine yr/wk Serial number

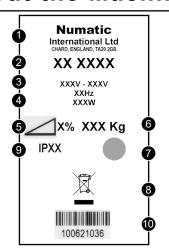

Safety Critical Component

Mains lead: H05VV-F 20m x 1.0 mm² x 3 core

WEEE (Waste, Electrical and Electronic Equipment)

Scrubber dryer Accessories and packaging should be sorted for environmentally- friendly recycling. **Only for EU countries.**


Do not dispose of scrubber-dryer into household waste.

According to the European Directive 2002/96/EC on waste electrical electronic equipment and its incorporation into national law.

Scrubber-dryers that are no longer suitable for use must be separated, collected and sent for recovery in an environmentally- friendly manner.



PPE (Personal protective equipment) that may be required for certain operations).

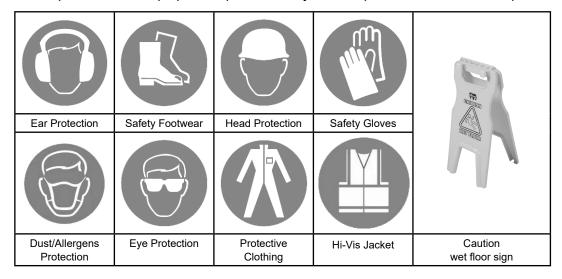

Note:A risk assessment should be conducted to determine which PPE should be worn.

Daily

Keep the machine clean

Ensure brushes/ pads/ squeegee/ filters are in good condition

Check for any worn or damaged parts and replace immediately

Drain and rinse dirty water tank after every use

Store machine with brush deck secured in tilted position

Weekly - as daily and -

Check brush or pad and skirt and rinse

Check floor tool blades for wear and wipe clean

Clean separator assembly including filter and check condition of seal

Flush out system with clean water and clean filters

Do not steam clean or pressure wash

Maintenance

Information for Scrubber Dryer



ORIGINAL INSTRUCTIONS READ MANUAL BEFORE USE

Component	Interval	Inspect for
Mains Lead	DAILY	Scuffing, cracks, splits, conductors showing
Brushes	DAILY	Bristle damage, wear, drive collar wear
Squeegee Blade	BEFORE EACH USE	Wear, cracks, splits
Filters	BEFORE EACH USE	Clogging and debris retention
Tanks	AFTER EACH USE	Rinse dirty water tank after use



As with all electrical equipment care and attention must be exercised at all times during its use, in addition to ensuring that routine and preventative maintenance is carried out periodically in order to ensure its safe

Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility or liability in this respect.

When ordering spare parts always quote the Model Number / Serial Number specified on the Rating Plate.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This machine is not suitable for picking-up hazardous dust.



Do not use on surfaces having a gradient exceeding that marked on the appliance.

The machine is not to be stored outdoors in wet conditions.

This machine is for indoor use only.

Read the instruction manual before using the appliance.

This product meets the requirements of IEC 60335-2-72

NOTES

This machine is also suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices for other than normal housekeeping purposes.



- Ensure only competent persons unpack/assemble the machine.
- Keep your machine clean.
- Keep your brushes in good condition.
- Replace any worn or damaged parts immediately.

DO

- Regularly examine the power cord for damage, such as cracking or ageing. If damage is found, replace the cord before further use.
- Only replace the power cord with the correct Numatic approved replacement parts.
- Ensure that the work area is clear of obstructions and / or people.
- Ensure that the working area is well illuminated.
- Pre-sweep the area to be cleaned.



- Use steam cleaners or pressure washers to clean the machine or use in the rain.
- Attempt machine maintenance or cleaning unless the power plug has been removed from the supply
- Allow any inexperienced repairs. Call the experts.
- Strain cable or try to unplug by pulling on cable.
- Leave the brush pad on the machine when not in use.
- Allow the machine to be used by inexperienced or unauthorised operators or without appropriate

DON'T

- Use the machine without the solution tanks properly positioned on the machine, as shown in the instructions.
- Expect the machine to provide trouble-free, reliable operation unless maintained correctly.
- Lift or pull the machine by any of the operating triggers Use the main handle. Remove the handle from the machine except for service and repair.
- Use on surfaces having a gradient exceeding that marked on the machine.



Only use brushes provided with the appliance or those specified in the instruction manual. The use of other brushes may impair safety.

A full range of brushes and accessories are available for this product.

Only use brushes or pads which are suitable for the correct operation of the machine for the specific task being performed.

It is essential that this equipment is correctly assembled and operated in accordance with current safety regulations. When using the equipment always ensure that all necessary precautions are taken to guarantee the safety of the operator and any other persons who may be affected.

Wear non-slip footwear when scrubbing. Use a respiratory mask in dusty environments.

When cleaning, servicing or maintaining the machine, replacing parts or converting to another function the power source shall be switched off.

Mains operated machines shall be disconnected by removing the power plug, and battery operated machines shall be disconnected by switching off the isolating key.

Machines left unattended shall be secured against unintentional movement. Operators shall be adequately instructed as to the correct use of the machine.

When detergents or other liquids are used, read the manufacturer's instructions. Do not allow the supply cord to come into contact with the rotating brushes.

When detergents or other liquids are used, read the manufacturer's instructions. Do not allow the supply cord to come into contact with the rotating brushes.

Data

Brush Motor	Vac Motor	Power	Noise	Speed	Brush	Dimensions
400 W	300 W	220-240v 50/60 Hz 115v 50Hz	71 dB(A)	50Hz = 150rpm	400 mm	Width - 520 mm Length - 880 mm Height - 1132 mm
Gross Weight Full	Protection Class	Hand Arm Vibration	Pad	Net Weight	Cleaning Range	Water Capacity
56.5 kg	IPX 4	1.4 +/- 0.06ms ²	360 mm	38.5 kg	42 m	18 L
Fluid Flow tap @40º	Brush / Pad Pressure	Cleaning Speed				
0.35 LPM	27.4 / 26.2 G/ cm ²	0-4.2 Kph				


Trouble-Shooting

PROBLEM	CAUSE	SOLUTION
Poor water pick-up	Waste-water tank full Clogged / blocked vacuum hose Loose hose connections Debris basket filter clogged/blocked Separator filter clogged / blocked Poor separator seal Damaged separator seal Damaged / split vacuum hose Damaged floor-tool blades	Empty waste-water tank Remove and clean Push tight connections Remove and clean Remove and clean Clean and refit Renew (contact service dept) Renew (contact service dept) Renew (contact service dept)
No brush / scrub function	No brushes fitted	Check and fit
Little or no water flow	Clean-water tank empty Clean-water tank filter blocked/ clogged	Fill clean-water tank Remove and clean

Failure to rectify the problem or in the event of a breakdown contact your Numatic dealer or the Numatic Technical help line +44 (0)1460 269268


Spare Parts

606261	HT1840 & TT 1840 Replacement Blade set	237411	HT1840 & TT1840 Grit Basket
237466	Skid Plate	237232	HT1840 & TT1840 Separator Filter
237268	Filler Cap Lid	303985	HT1840 & TT1840 Filler Cap Assembly
208448 Tank Drain Cap		303961	Clean Tank Filter Assembly (Inside)
208455 M5 Knob (Black)		303997	HT1840 & TT1840 dump Hose Assembly
208471 Constant Tension Clip (Dump Hose)		213055	HT1840 & TT1840 Vac Hose
208537	Constant Tension Clip (Vac Hose)	231054	HT1840 & TT1840 Suction hose

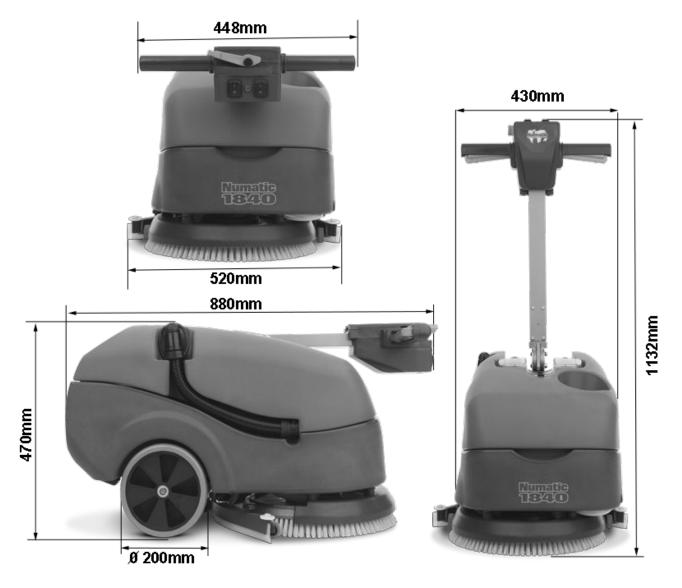



Notes:


HT 1840 TT 1840 220v ~ 240V ~ 115V DRW - 13476 (A01) 19/03/2013

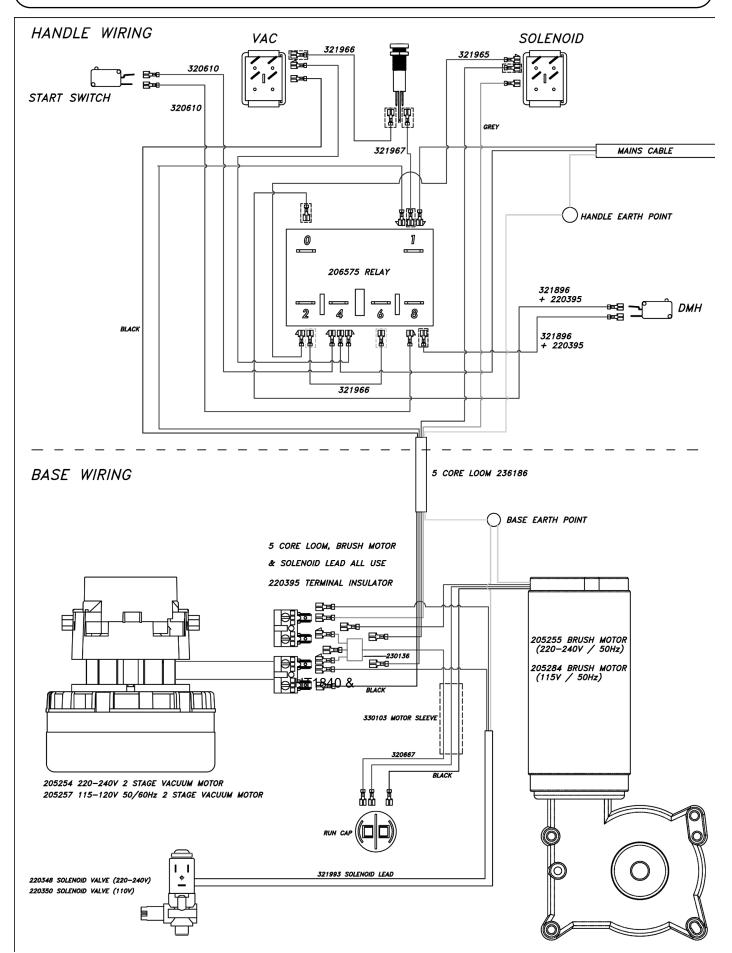


HT1840 Face Fitting Instructions

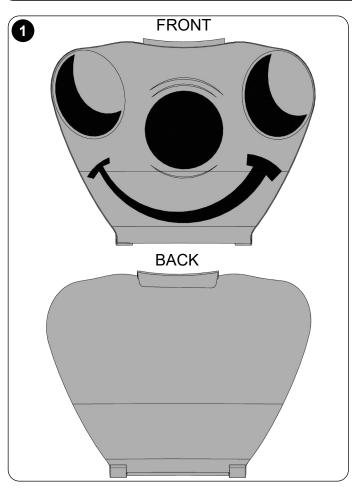


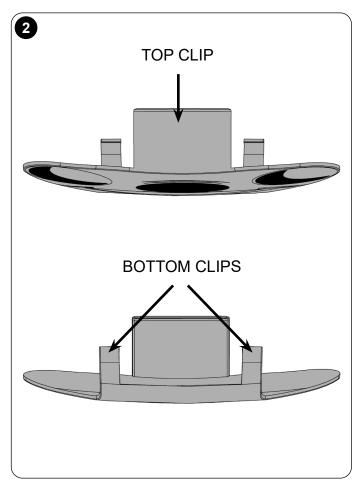

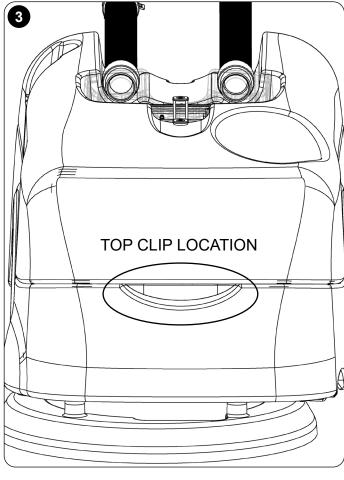

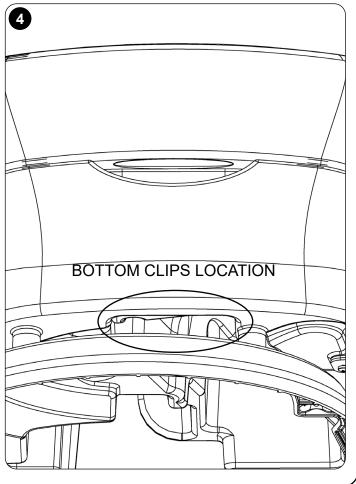

HT1840 Face Fitting Instructions

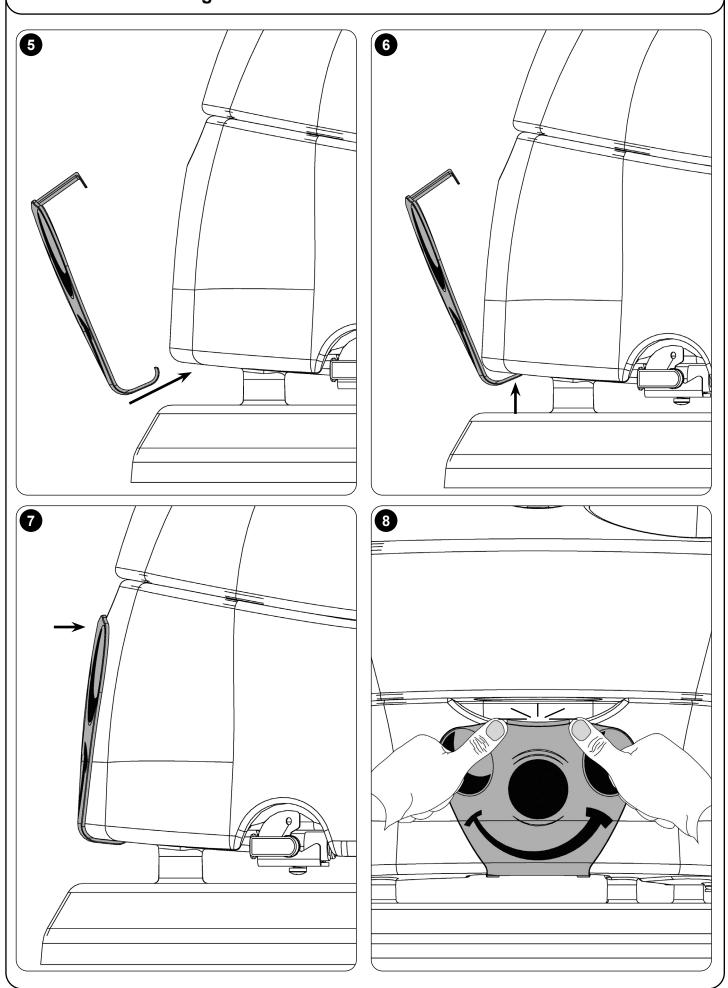

Notes

Notes

Numatic International Warranty

Numatic International Limited warrant to the original purchaser that its products are free of defects in both material or workmanship for the period shown below:-

Homecare and Cleancare Vacuum cleaners	2 Years
Rotary Floor Machines	2 Years
Twintec Auto Scrubber Dryer	
Vario Ride-On Scrubber Dryer	0 hours
Mopping, Compacts, Combi and Servocare Products	. 1 Year
Individual Accessories and Spare Parts	6 Months

Note: This warranty expressly excludes consumable parts such as carbon brushes, floor brushes, mops, batteries etc, that are considered replaceable from time to time during the normal working life of the machine.

Using non Numatic dustbags can be detrimental to both machine performance and life and may invalidate the Warranty.

- A. The warranty period commences from the date the goods are purchased.
- B. All warranty claims must be processed through the Dealer from whom the equipment was purchased. The Dealer will co-operate with the purchaser throughout the warranty claims procedure and will arrange any necessary repairs using genuine Numatic parts.
- C. If the original Dealer is no longer able to fulfil his obligations please contact Numatic International Limited with full details of the claim and proof of purchase so that this may be processed without delay.
- D. Any warranty claim can only relate to the specific part that is proven to be at fault and for which a replacement will be supplied but cannot be extended to constitute a claim against the complete machine.
- E. Numatic International will supply the Dealer with any warranty parts required, subject to the claim being validated, after return of the faulty items in accordance with Numatic International Limited's General Conditions of Sale.
- F. Claims will not be accepted if they are the result of fair wear and tear, misuse or abuse of any kind.
- G. No replacement will be given unless the appropriate evidence of the validity of the claim has been provided to the satisfaction of Numatic International Limited.
- H. Numatic International Limited reserve the right to charge for any unnecessary work carried out as a result of an invalid claim.
- I. No variation to this warranty may be made or implied by any member of Numatic International Limited or its Dealers unless such variation is in writing and authorised by the Company

Numatic International Limited. Chard, Somerset, TA20 2GB Telephone: 01460 68600 Fax: 01460 68458

© Numatic International Limited

UKCA Declaration of Conformity	A		EU EC, EL, UE, ES: Declaration of Conformity Prohidsenio shodë	Декларация за съответствие у Δήλωση συμμόρφωσης Merfelelősési rwilatkozat	eтствие [
Manufacturer:	Numatic I Chard Somerset	Numatic International Limited Chard Somerset	Konformitätserklärung Overensstemmelseserklæring Overensstemmelseserklæring Overensstemmelseserklæring Overlaration de conformité Declaration de conformité		rmità F
	IAZU ZGB WWW.num	I AZU ZGB www.numatic.co.uk	Manufacturer: / Výrobce / Hersteller / Fabrikant / Fabricante / Tootja / Fabricant / προκιαθορμπελι / Καπακευαστής / Gyártó / Fabbricante	ikant / Fabricante / Tootja τής / Gyártó / Fabbricante	Numatic Inte
Product:	TT184	TT1840, HT1840	/ Gamintojas / Fabrikant / Produsent / Fabricante / Producent / Producător / производитель / Tillverkare / Proizvajalca / Valmistaja:	icante / Producent / Proizvajalca / Valmistaja:	Somerset TA20 2GB
Description:	Floor -	Treatment - Walk Behind – Commercial	Described (Described (Described (Described) Described (Described)	Topost Despire	www.numat
			Products Oppose Tribute Product Products Oppose Product Produc	oducto, Toodet, Produit / oduktas / Artikel / Produkt dukt / Izdelka / Tuote:	1 1 1 8 4 0, H 1 1
			Description: / Popis / Beschreibung / Beskrivelse / Descripcion / Kirjeldus / La description / Описание / Пεριγραφή / Leirás /	velse / Descripcion / .γραφή / Leirás /	Floor Treatn
We, Numatic hereby declare unde	er our sole respo	We, Numatic hereby declare under our sole responsibility, that the above-mentioned product(s) is/are	Descrizione / Apibudinimas / Omschrijving / Beskrivelse / Descrição / Opis / Descriere / Описание / Beskrivning / Opis / Kuvaus:	' Beskrivelse / Descrição / Opis / Kuvaus:	
in conformity with the following directives and standards.	directives and sta	indards.	GB we, Numatic hereby declare under our sole responsibility, that the above.	ВG ние, Numatic C настоящото декларираме на своя лична отговорност.	то говорност,
S.I. 2008: 1597	Supply of	EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017	with the following directives and standards.	съответствие със следните директиви и	ективи и
	Machinery	+ A15:2021	CZ My, Numatic prohlašujeme na svou	стандарти.	
	Regulations	EN60335-2-72:2012	výlučnou odpovědnost, že výše uvedený výrobek je ve shodě s následujícími	G Ν Εμεις, Numatic δηλωνουμε με αποκλειστική μας ευθύνη, ότι το	3 1 3
		EN62233:2008	směrnicemi a normami.	προαναφερόμενο προϊόν συμμορφώνεται με τις ακόλουθες οδηγίες και πρότυπα.	ιρφώνεται ιότυπα.
S.I. 2016: 1091	EMC	EN55014-1:2017 + A11:2020	Verantwortung, dass das oben genannte	HU Mi, Numatic Kijelentjük, egyedüli	gyedüli
	Regulations	EN55014-2:1997 + A1:2001 + A2:2008	Produkt den folgenden Richtlinien und Normen entspricht	felelősséggel, hogy a fent említett termék megfelel az alábbi iránvelveknek és	tt termék : és
		EN61000-3-2:2014	DK vi. Numatic erklærer hermed under	szabványoknak	
		EN61000-3-3:2013	eget ansvar at ovennævnte produkt(er) er i	IT Noi, Numatic dichiara sotto la propria	la propria
S.I. 2012: 3032	RoHS		overensstemmelse med følgende direktiver og standarder.	responsabilità, che il prodotto di cui sopra e conforme alle seguenti direttive e norme.	e norme.
	Regulations		ES Nosotros, Numatic declaramos bajo	LT Mes, "Numatic pareiškiu vienašališkos	enašališkos
)		nuestra única responsabilidad que el producto antes mencionado está en	atsakomybės, kad pirmiau minėtas produktas atitinka šias direktyvas ir	as s ir
			conformidad con las siguientes directivas y	standartus	
			normas	$\sf NL$ we verklaren Numatic hierbij op eigen	bij op eigen
Authorised Signatory: Mr. Matthew Coles	hew Coles	Position: Head of Technology	E Meie, Numatic Käesolevaga kinnitame ja kanname ainuisikulist vastutust, et eespool	verantwoordelijkheid, dat het bovengenoemde product voldoet aan de	et aan de
			almost and to only on the college in company	company of actification observed	

Floor Treatment – Walk Behind – Commercial

Numatic International Limited Chard Somerset TA20 2GB

www.numatic.co.uk TT1840, HT1840

Deklaracja zgodności Declaracja de conformitate Alewapawa o cooreercrawa Fórsäkran om överensstämmelse Tjayao o skladnosti Vaatimustenmukaisuusvakuutus

GB We, Numatic hereby declare under our		
The second secon	BG ние, Numatic С настоящото	PT Nós, a Numatic declaramos, sob nossa
sole responsibility, that the above-	декларираме на своя лична отговорност,	exclusiva responsabilidade, que o produto
mentioned product(s) is/are in conformity	че посочените по-горе продуктът е в	acima mencionado está em conformidade
with the following directives and standards.	съответствие със следните директиви и	com as diretrizes e normas a seguir.
CZ My, Numatic prohlašujeme na svou	стандарти.	PL My, Numatic Niniejszym oświadczamy z
výlučnou odpovědnost, že výše uvedený	GR Εμείς, Numatic δηλώνουμε με	pełną odpowiedzialnością, że wyżej
výrobek je ve shodě s následujícími	αποκλειστική μας ευθύνη, ότι το	wymieniony produkt jest zgodny z
směrnicemi a normami.	προαναφερόμενο προϊόν συμμορφώνεται	następującymi dyrektywami i normami.
DE Wir, Numatic erklären in alleiniger	με τις ακόλουθες οδηγίες και πρότυπα.	RO Noi, Numatic Prin prezenta declarăm
Verantwortung, dass das oben genannte	HU Mi, Numatic Kijelentjük, egyedüli	pe propria răspundere, că produsul mai sus
Produkt den folgenden Richtlinien und	felelősséggel, hogy a fent említett termék	menționat este în conformitate cu
Normen entspricht.	megfelel az alábbi irányelveknek és	următoarele standarde și directive.
DK vi, numatic erklærer hermed under	szabványoknak	RU ми, нилфиск овим изјављујем под
eget ansvar at ovennævnte produkt(er) er i	T Noi, Numatic dichiara sotto la propria	пуном одговорношћу, да наведеног
overensstemmelse med følgende direktiver	responsabilità, che il prodotto di cui sopra è	производ је у складу са следећим
og standarder.	conforme alle seguenti direttive e norme.	директивама и стандардима.
ES Nosotros, Numatic declaramos bajo	LT Mes, "Numatic pareiškiu vienašališkos	SE Vi Numatic förklarar härmed under
nuestra única responsabilidad que el	atsakomybės, kad pirmiau minėtas	eget ansvar att ovan nämnda produkt
producto antes mencionado está en	produktas atitinka šias direktyvas ir standartus	överensstämmer med följande direktiv och
normas	N We confidence the control of the c	<u> </u>
	I Ve verkiaren numatic merbij op eigen	J. IVII, INUITIALIC IZJAVIJATNO S POITIO
L L Meie, Numatic Kaesolevaga Kinnitame ja	verantwoordelijkheid, dat het	odgovornostjo, da je zgoraj omenjeni
kanname ainuisikulist vastutust, et eespool nimetatud toode on kooskõlas järgmiste	bovengenoemde product voldoet aan de volgende richtlinen en normen	izdelek v skladu z naslednjimi smernicami in standardi.
direktiivide ja	NO Vi. Numatic erklærer herved under	FI Me. Numatic täten vakuutamme omalla
FR Numatic déclare sous notre seule	eget ansvar, at det ovennevnte produktet er	vastuulla, että edellä mainittu tuote on
responsabilité que le produit mentionné ci- dessus est conforme aux directives et normes	i samsvar med følgende direktiver og etandarder	yhdenmukainen seuraavien direktiivien ja standardien mukaisesti
suivantes.		

2006/42/EC	Machinery Directive	rective	EN60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021 EN60335-272:2012
2014/30/EU	EMC Directive	0	ENDS.23.7008 ENS.5014-1:2017 + A.11:2020 ENS.5014-2:1997 + A.1:2001 + A2:2008 ENS.5003-2:2013 ENG.1000-3:3:2013
2011/65/EU	RoHS Directive	ie	
Authorised Signatory: Mr. Matthew Coles	Coles		Position: Head of Technology
			Numatic International Limited
,			Chard,
Signed: M. Colo	Date:	30th August 2023	Somerset, TA20 2GB, UK

Numatic International Limited,

Somerset, TA20 2GB, UK

Signed: \mathcal{M} \mathcal{C} Date: 30^{th} Aug 2023

Chard,

This Machine Has Been P With The Following	acked	Distributed by:	
Brush / Pad			
Floor Tool			
Charging Lead			
Battery			
Fuse Pack			
Signed			
	/		
		Numatic.com	

Numatic International Limited. Chard, Somerset TA20 2GB ENGLAND Tel: 01460 68600 www.numatic.co.uk

Numatic International GmbH. Fränkische Straße 15–19 D-30455 Hannover, DEUTSCHLAND Tel: 05 11 98 42 16 0 www.numatic.de

Numatic International SAS. 13 / 17 rue du Valengelier EAE La Tuilerie, 77500 CHELLES, FRANCE Tel: 01 64 72 61 61 www.numatic.fr

Numatic International BV, Vennootsweg 15 2404 CG, Alphen aan den Rijn, Nederland Tel: 0172 467 999 www.numatic.nl

Numatic International (Pty.) Ltd. 16th & Pharmaceutical Roads, Midrand, Gauteng, SOUTH AFRICA 1685 Tel: 0861 686 284 www.numatic.co.za

Numatic International Schweiz AG. Sihlbruggstrasse 3A, 6340 Baar. SCHWEIZ Tel: 0041 (0) 41 76 80 76 - 0 www.numatic.ch

Numatic International ULDA. Rua da Boa Viagem, 177 4470.210 Maia. PORTUGAL
Tel: +351 220 047 700 www.numatic.pt

Numatic International SLU. C/ La Forja, 41, 08840 Viladecans (Barcelona), Spain

Tel: +34 93 647 22 22 www.numatic.es

Numatic International Denmark. Fränkische Straße 15-19, 30455 Hannover, DEUTSCHLAND Tel: +45 (0) 31 64 08 08 info@numatic-online.dk www.numatic-online.dk